

START HERE! READ ME FIRST

Don't be a hero and muscle through this installation without reading these fitting instructions first! Improper installation of this gear may void certain aspects of your warranty.


Before you begin, take a moment and open all your Front Runner rack kit boxes and gather the assembly instructions for the various components.

A complete kit will contain:

1. A Front Runner Mounting System specific to your vehicle
2. A Front Runner Rack Tray or Load Bar Slats

This document will guide you through the assembly of the mounting system and assist you in fitting the roof rack tray or load bars to your specific vehicle.

Please refer to the next page for a list of all the components, quantities and tools required.

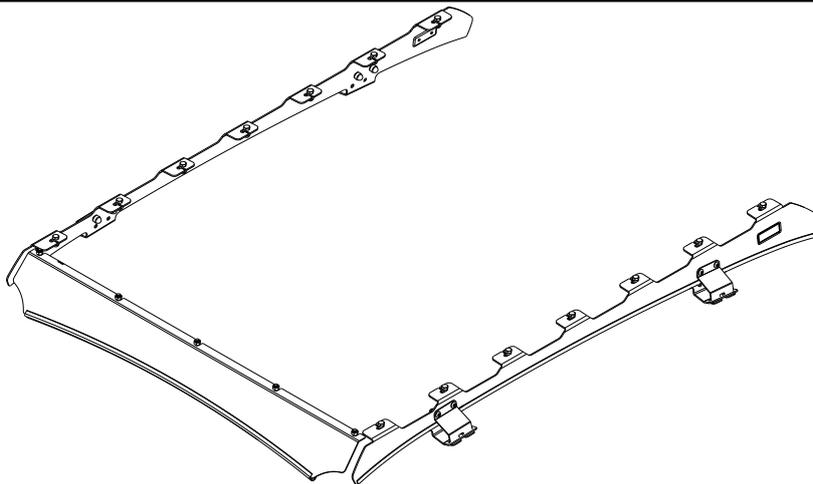

IMPORTANT WARNING! ⚠️

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.




1 GET ORGANIZED

IN THE BOX

1	1 X	Left Hand Side Foot Rail
2	1 X	Right Hand Side Foot Rail
3	1 X	Wind Fairing
4	4 X	Outer Rail Grip
5	8 X	M8x20 Button Head
6	22 X	M8 x 16 x 1.6 Flat Washer
7	27 X	M8 Nyloc Nut
8	22 X	M8 Nut Cap
9	14 X	M8 x 20 Hex Head Bolt
10	5 X	M8 x 16 Button Head Screw
11	1 X	Wind Fairing Rubber
12	1 X	Rubber Foam Sheet
13	2 X	Rubber Foam Strips

TOOLS NEEDED

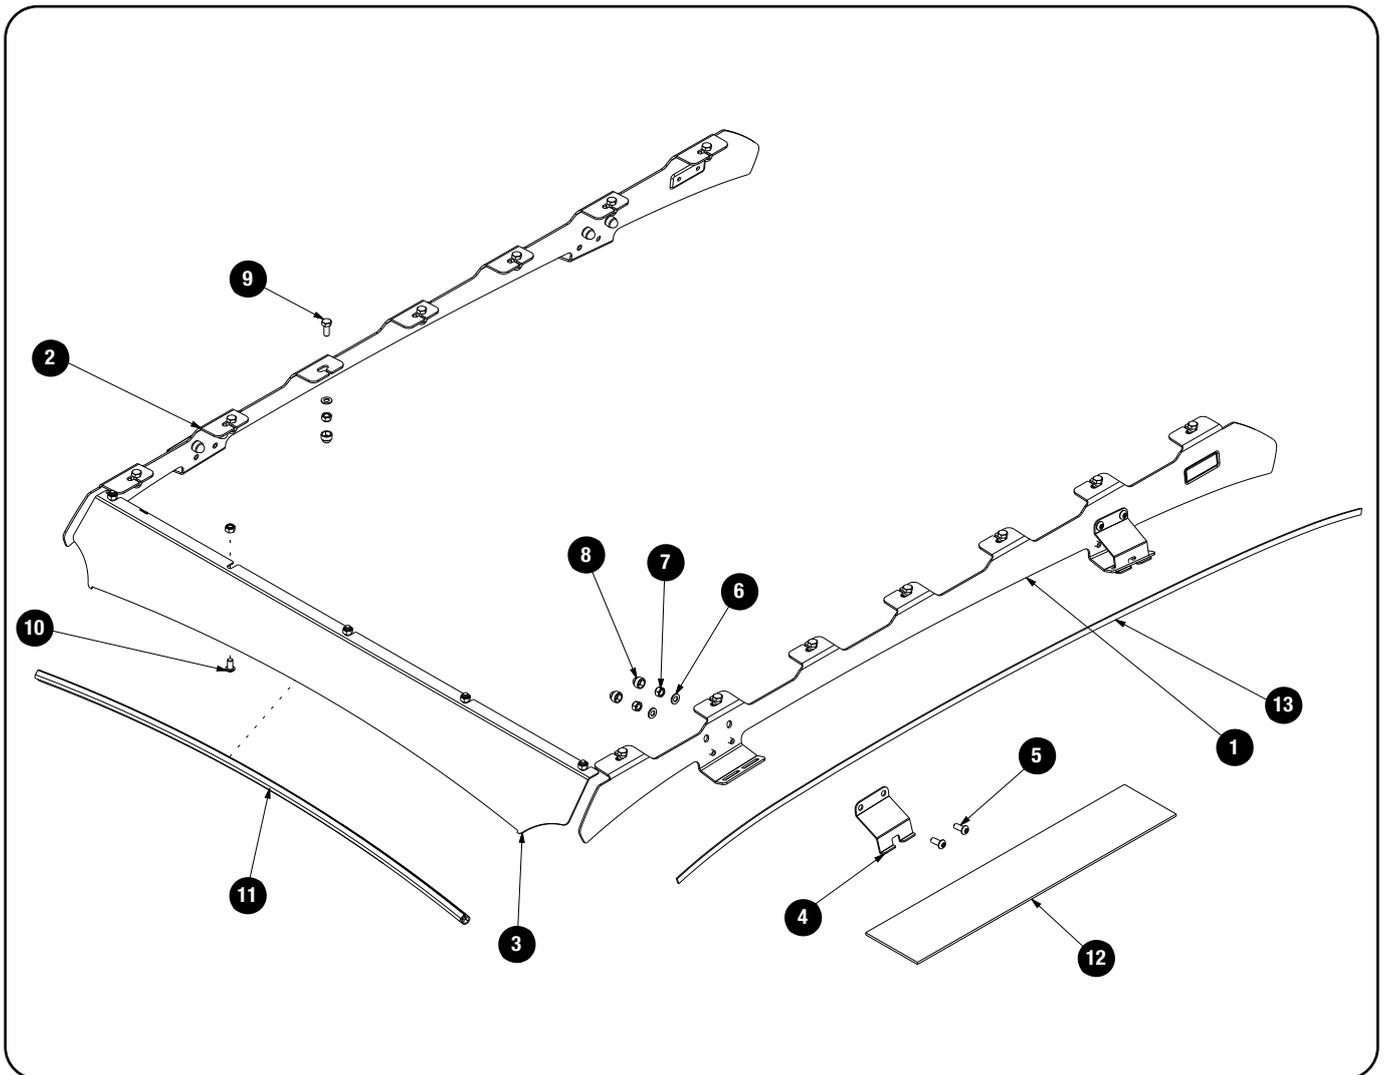


2.1



Check the four holes on the inside of each rail to ensure that they are clean and free of any debris.

2.2

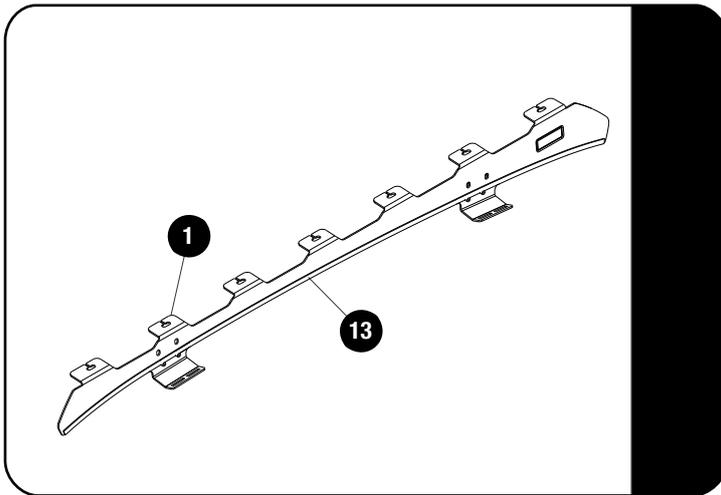

Apply the the Rubber Foam Strip (Item 13) to the Foot Rail (Item 1) outer edge as shown.

2.3




Cut the Foam Rubber sheet to suit the Foot Rail lower grip size. It should sit flush against the foam rubber strip applied earlier and up to the start of two lower slots as shown.

Place the foot rail on the inside of the factory rail and rotate while moving the lower grip inward under the roof rail.


When aligned push the Foot Rail up against the factory roof rail and hold in place.

2.4

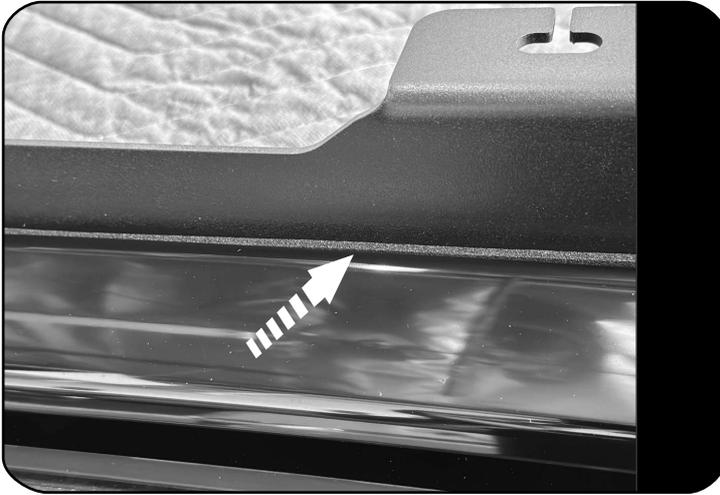

🔄 The foam strip should align with the top edge of the factory rail

2.5

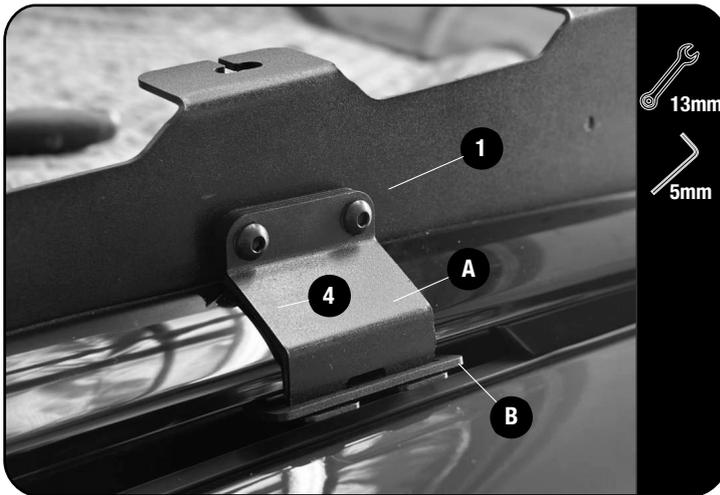

🔄 Cut to size and adhere a foam rubber pad on the inside two surfaces as indicated (A & B) of the four Outer Rail Grips (Item 4).

Insert the Outer Grip (Item 4) into the foot Rail (Item 1) slots and push inward while holding the Foot Rail in place.

Use two M8 x 20 Button Head Screws (Item 5) M8 x 16 x 1.9 Flat Washer (Item 6) and M8 Nyloc Nuts (Item 7) loosely secure the Foot Rail to the factory foot rails.


When both Outer Grips have been secured to the Foot Rail they can be fully tightened and M8 Nut Caps (Item 8) placed over the nuts Do this with the opposite side rail.



Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

2.6

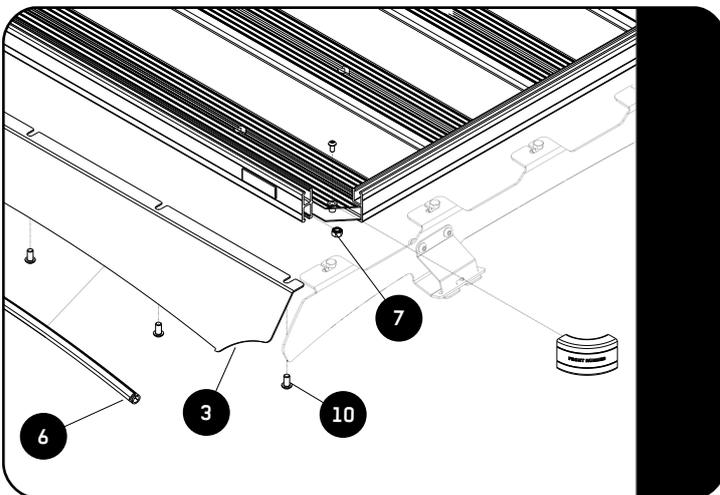


🔄 Refer to RRSUNI when assembling your Slimline II Tray.

Remove the Roof rack Corner and slide the M8 Nyloc Nuts (Item 7) into the T-slot of the front Combined slat.

Fit the Wind Fairing Rubber (Item 11) to the Wind Fairing (Item 3) The Bubble should face down. Remove the rack corner and insert four M8 Nyloc Nuts (Item 7). Fit the Wind Fairing to the rack and secure using M8x20 Button Head Screws (Item 5). Center the fairing before fully tightening.


2**FIT AND SECURE**

2.7

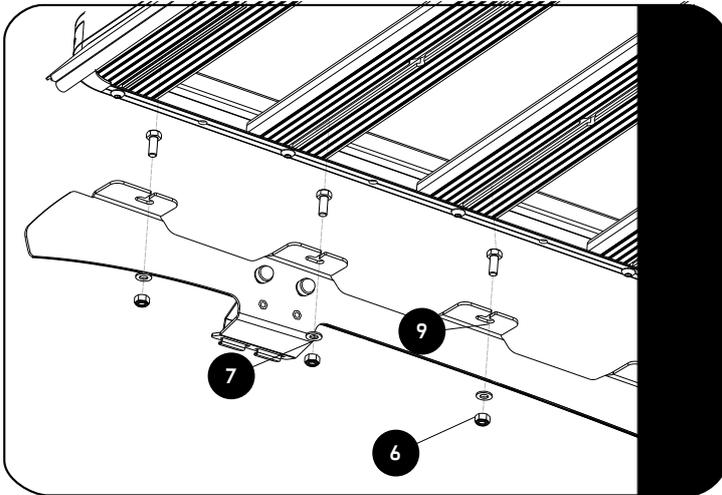

Fit your Roof Rack to the Foot Rails using M8 x 20 Hex Bolts, M8 x 16 x 1.6SS Flat Washers and M8 Nyloc Nuts (Items 6, 7 & 9) as shown.

2.8

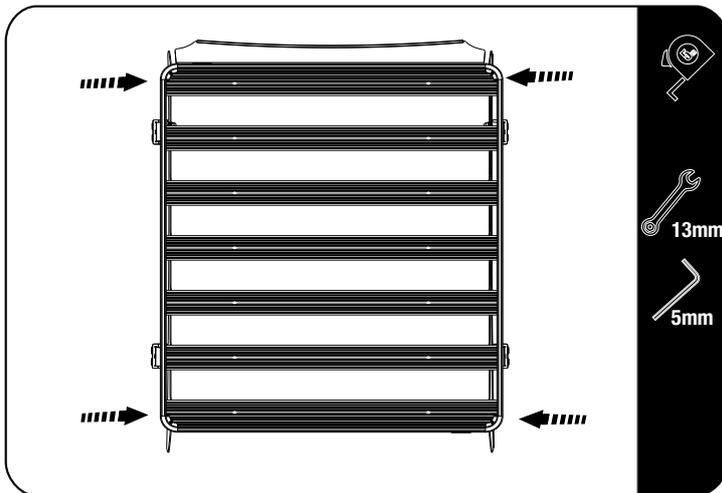

Starting at the back left and moving to the right front, Center the Roof Rack using a tape measure. Fully tighten the My Nyloc Nuts and place the M8 Nut Caps on the M8 Nyloc Nuts.

3

COMPLETION

3.1

Congratulations! You did it. Take a step back and admire your work!



4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner dealer in person or online.

IMPORTANT!

FRONT RUNNER RACK KITS OFTEN HAVE A HIGHER LOAD RATING THAN THE VEHICLES THEY ARE MOUNTED TO. PLEASE REFER TO YOUR SPECIFIC VEHICLE MANUFACTURER FOR A RECOMMENDED ROOF RATING. FRONT RUNNER CANNOT BE RESPONSIBLE FOR IMPROPER LOADING BEYOND THE VEHICLE MANUFACTURER'S STATED LOAD CAPACITY.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    