




FRONT RUNNER
VEHICLE OUTFITTERS

RACK TRUSS

ENG

RRAC132

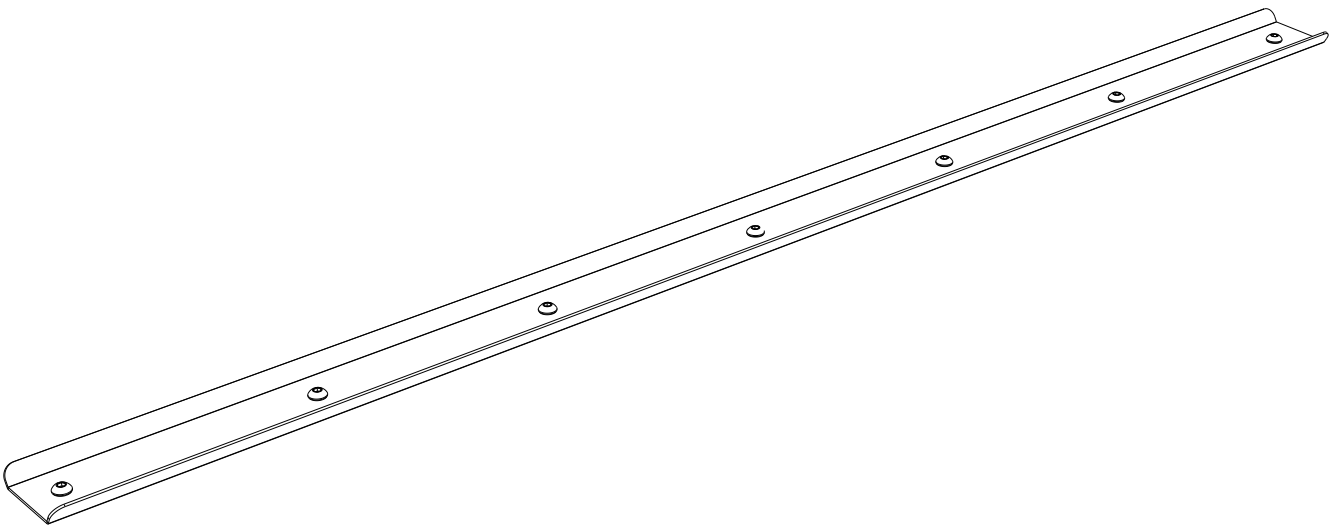

READ ME !

Thank you for purchasing a Front Runner Rack Truss.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.
Please call us if you have any questions about the installation of this product.

IMPORTANT WARNING!

FRONT RUNNER CAN NOT RECOMMEND A MAXIMUM LOAD CARRYING CAPACITY. PLEASE REFER TO YOUR VEHICLE MANUFACTURER'S RECOMMENDATIONS. IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE. CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

1

GET ORGANIZED


IN THE BOX

1	1 X	Rack Truss
2	7 X	M8 x 12 Button Head Bolt
3	7 X	M8 Schnorr Washer
4	7 X	M8 Half Nut

TOOLS NEEDED




FIGURE 1.1

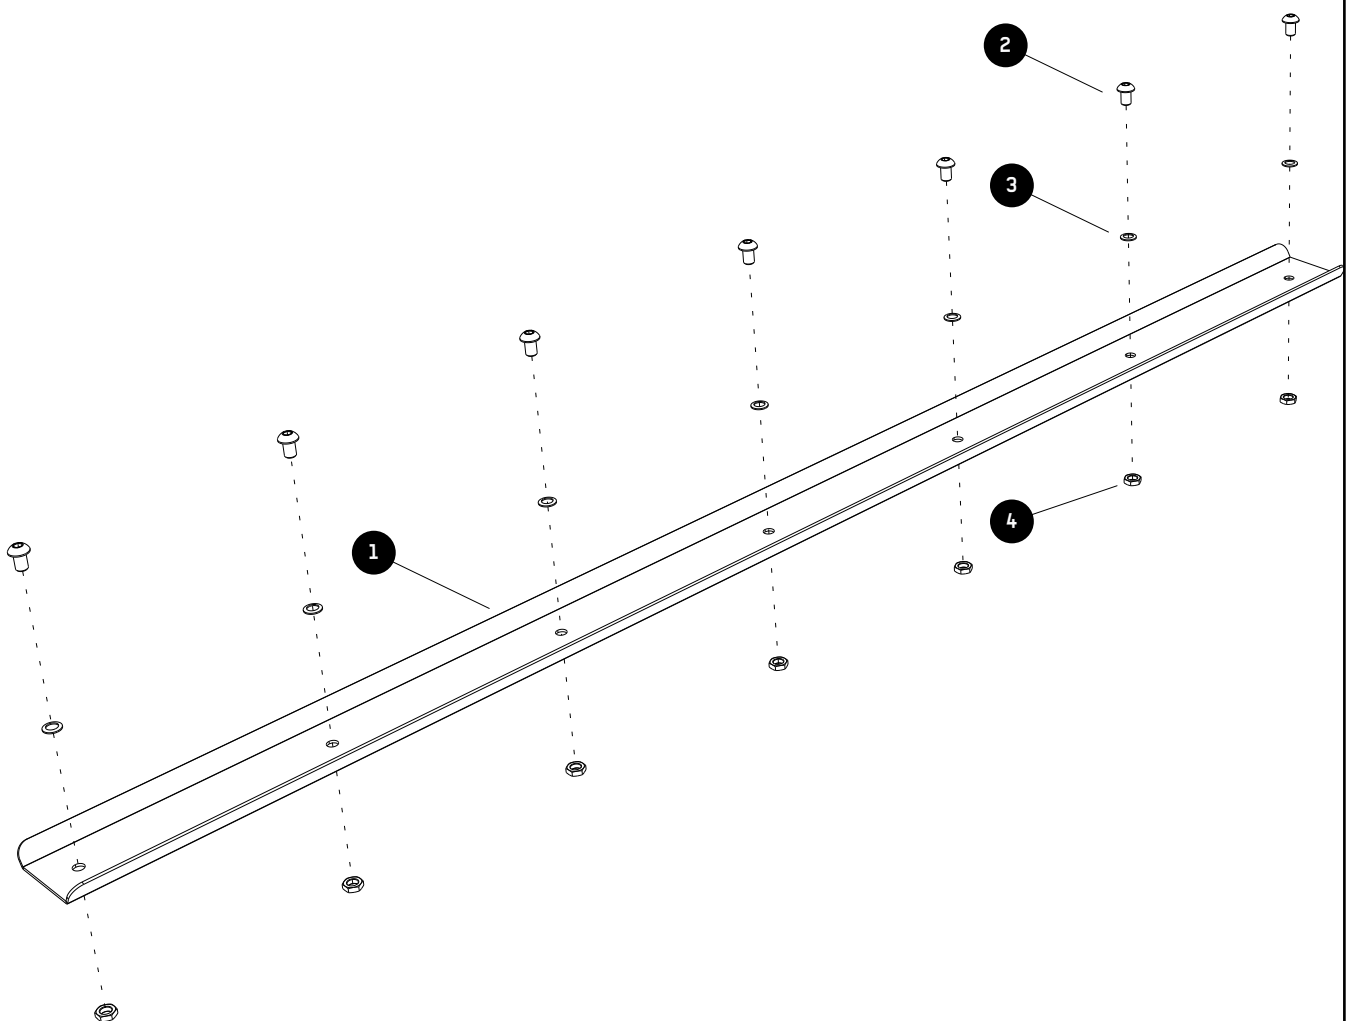

2

PREPARATION

2.1

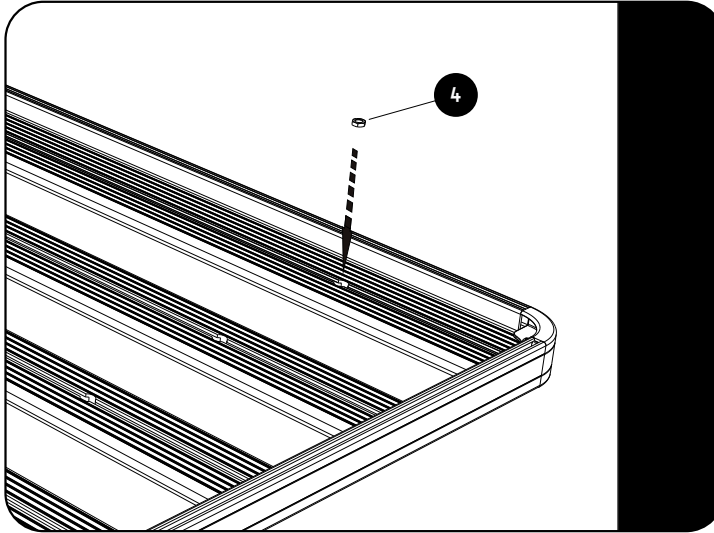


Decide where on the Rack you want to mount the Rack Truss (Item 1).

Slide the seven M8 Half Nuts (Item 4) into the machined slots of the slats.

If your Rack has a Foot Rail, it is recommended to mount the Rack Truss across slats that are not supported by the foot rail mounting points.

2.2

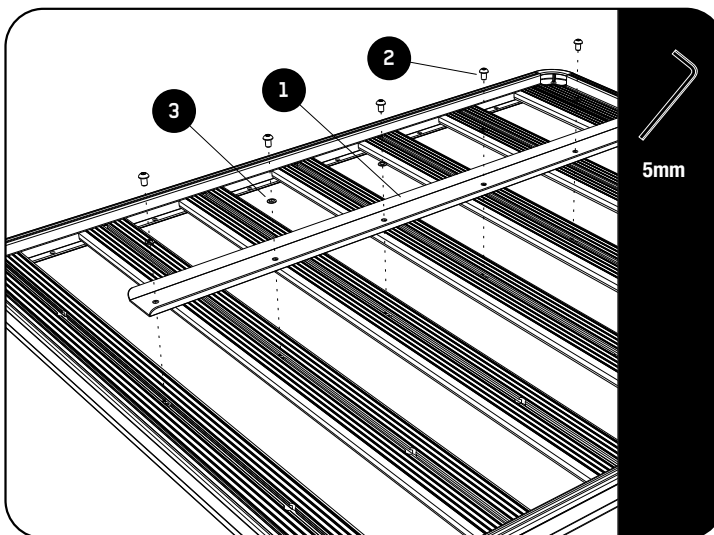


Loosely fit the Rack Truss (Item 1) to the rack using the M8 Half Nuts placed in the slats in Step 2.1, M8 x 12 Button Head Bolts and M8 Schnorr Washer (Items 2 & 3).

Center the Rack Truss left to right and fully tighten all the M8 Button Head Bolts.

3

COMPLETION

3.1

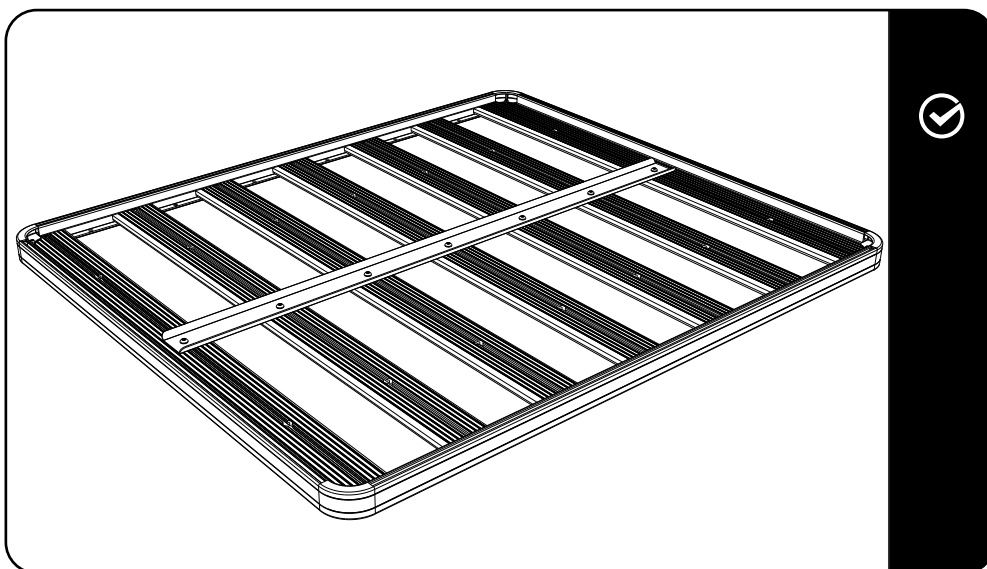

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or Online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    