


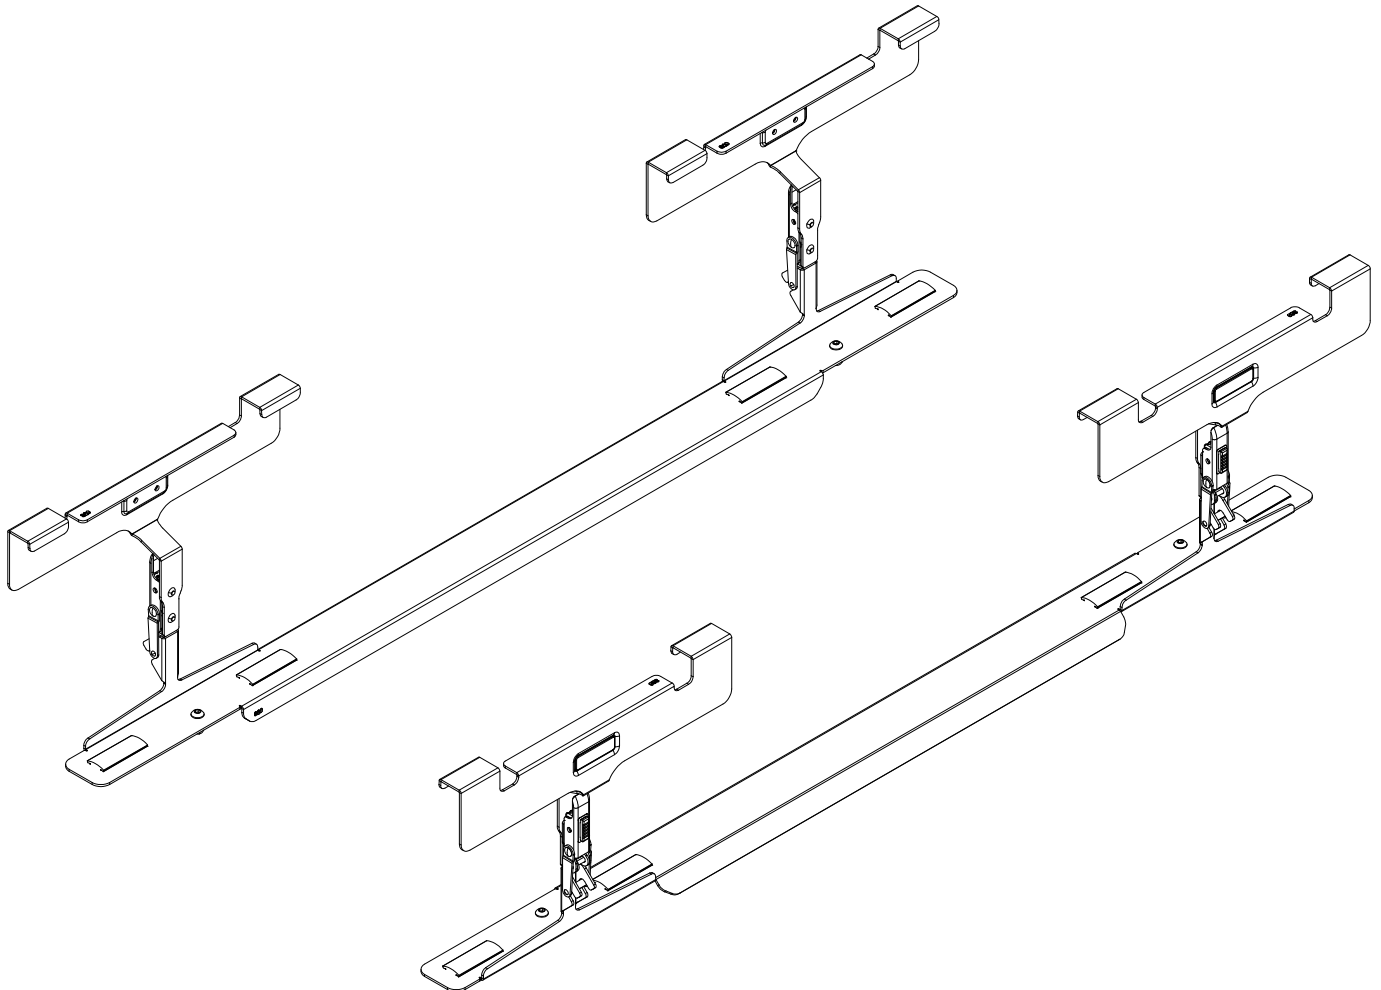

READ ME ! ⚠

Thank you for purchasing your Twin Wolf Pack Pro Table / Top Mount.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

IN THE BOX

1	4 X	Mounting Bracket
2	2 X	Base Bracket
3	4 X	M6x16 Button Head Bolt
4	4 X	M6x12x1 Flat Washer
5	4 X	M6 Nyloc Nut
6	4 X	M6 Nut Cap

TOOLS NEEDED




4mm Allen Key




10mm Wrench

FIGURE 1.1

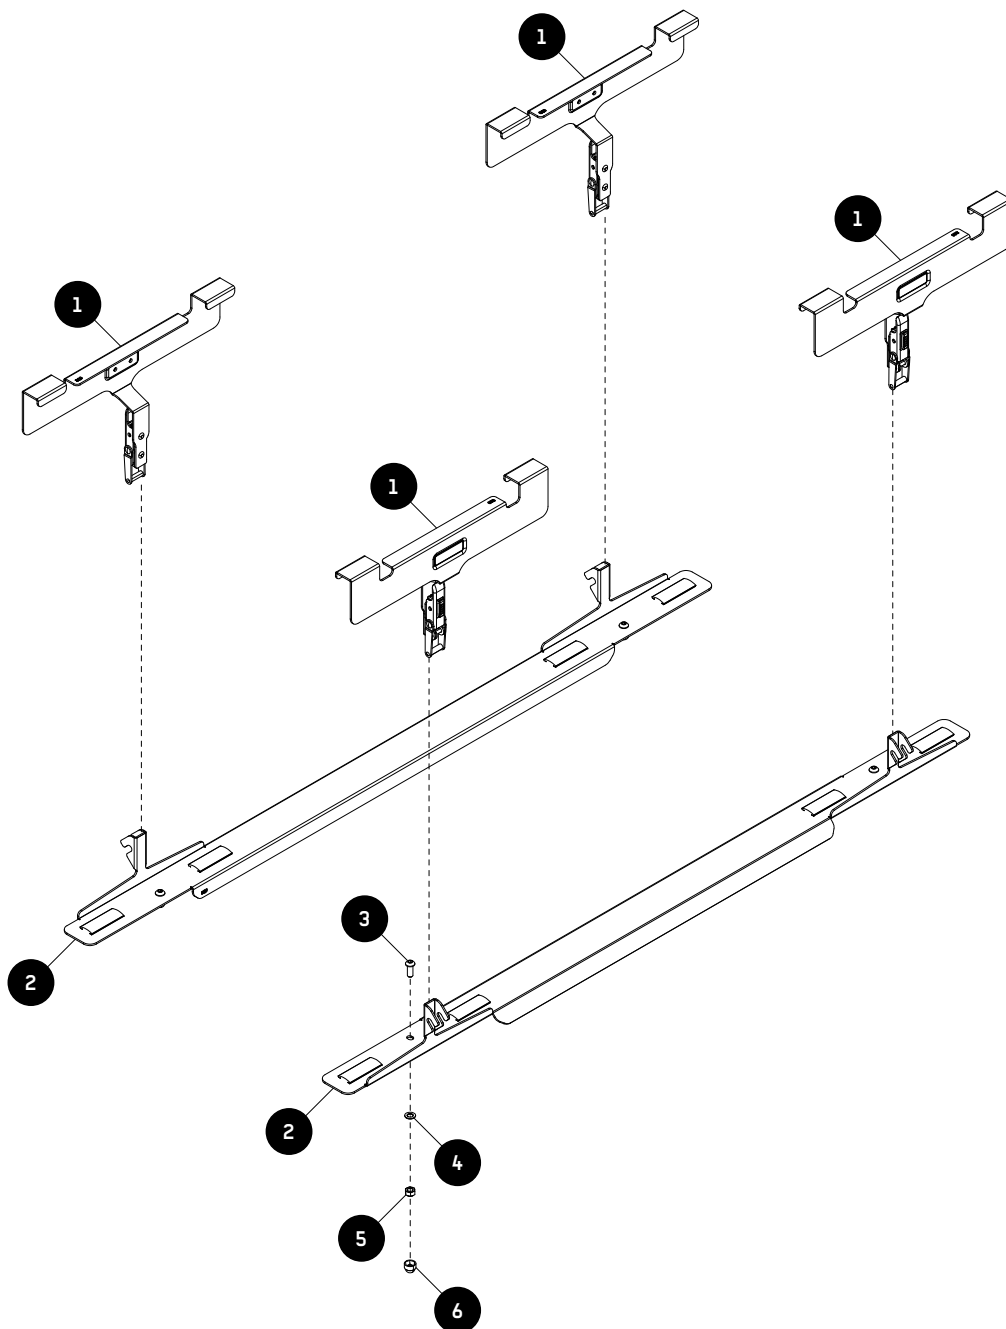

2.1

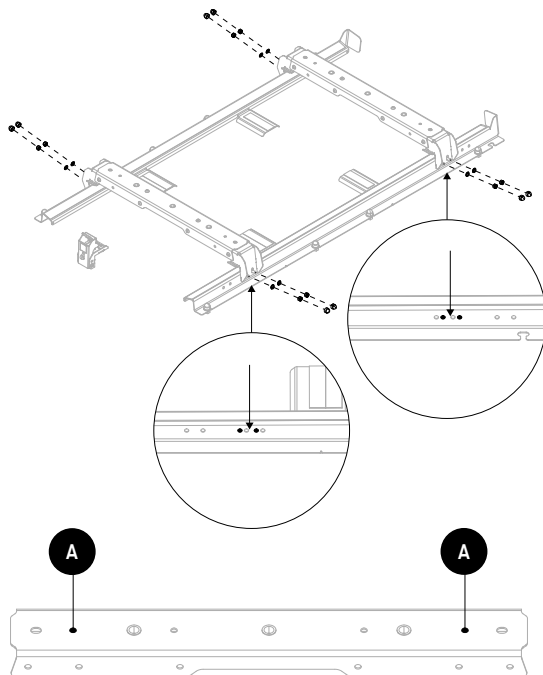


10mm



Ensure the Truss Brackets are assembled as shown, if not they will need to be shifted to the correct position, refer to fitment guide TBRA059 to shift the Truss Brackets.

The mounting holes shown by (A) will be used to mount the Base Brackets (Item 2).

2.2

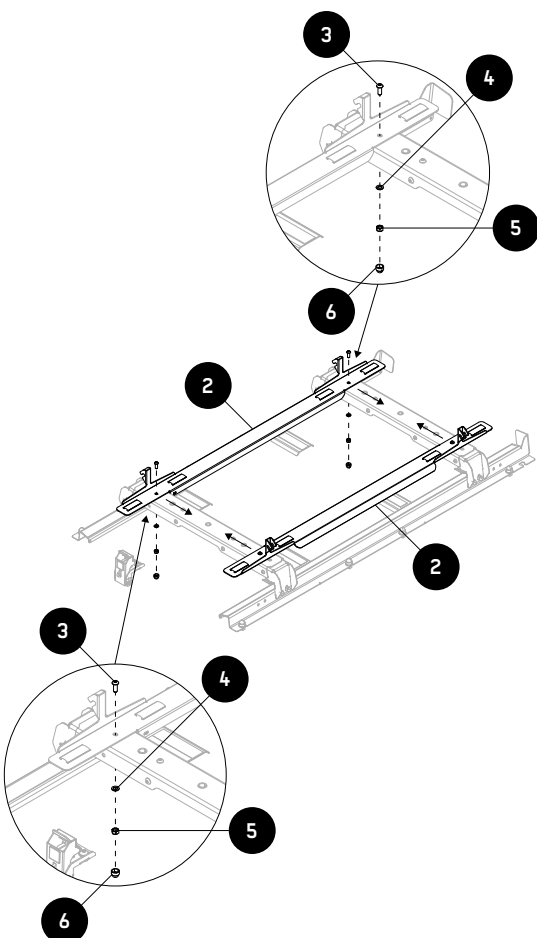

10mm



4mm



Assemble the Base Brackets (Item 2) to the Truss Brackets by using the M6x16 Button Head Bolts, M6x12x1 Flat Washers & M6 Nyloc Nuts (Item 3, 4 & 5).

Push the Base Brackets (Item 2) inward before fully tightening the M6 Nyloc Nuts (Item 5).

Finish off with the M6 Nut Caps (Item 6).

Repeat on both sides.




Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

2

FIT AND SECURE

2.3

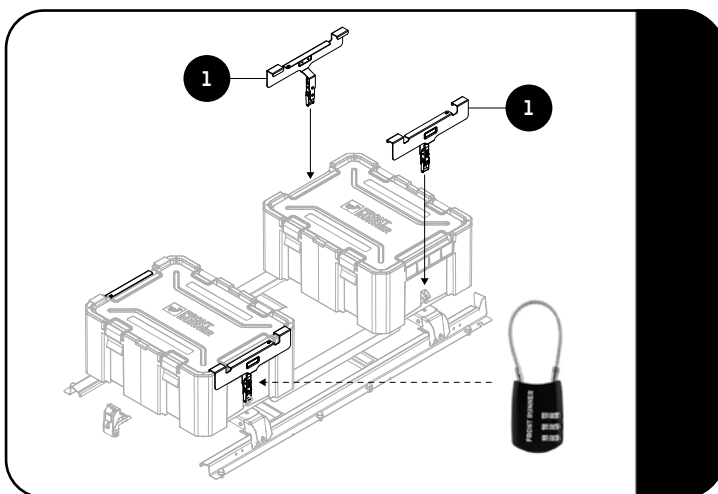

Place the Wolf Pack Pro containers onto the Base Brackets as shown.

Secure them by using the Mounting Brackets (Item 1).

Wolf Pack Pro (SBOX031) sold separately.

The Rack Accessory Lock (RRAC134) offers a keyless solution for added security, sold separately.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters

Share your adventures on:

