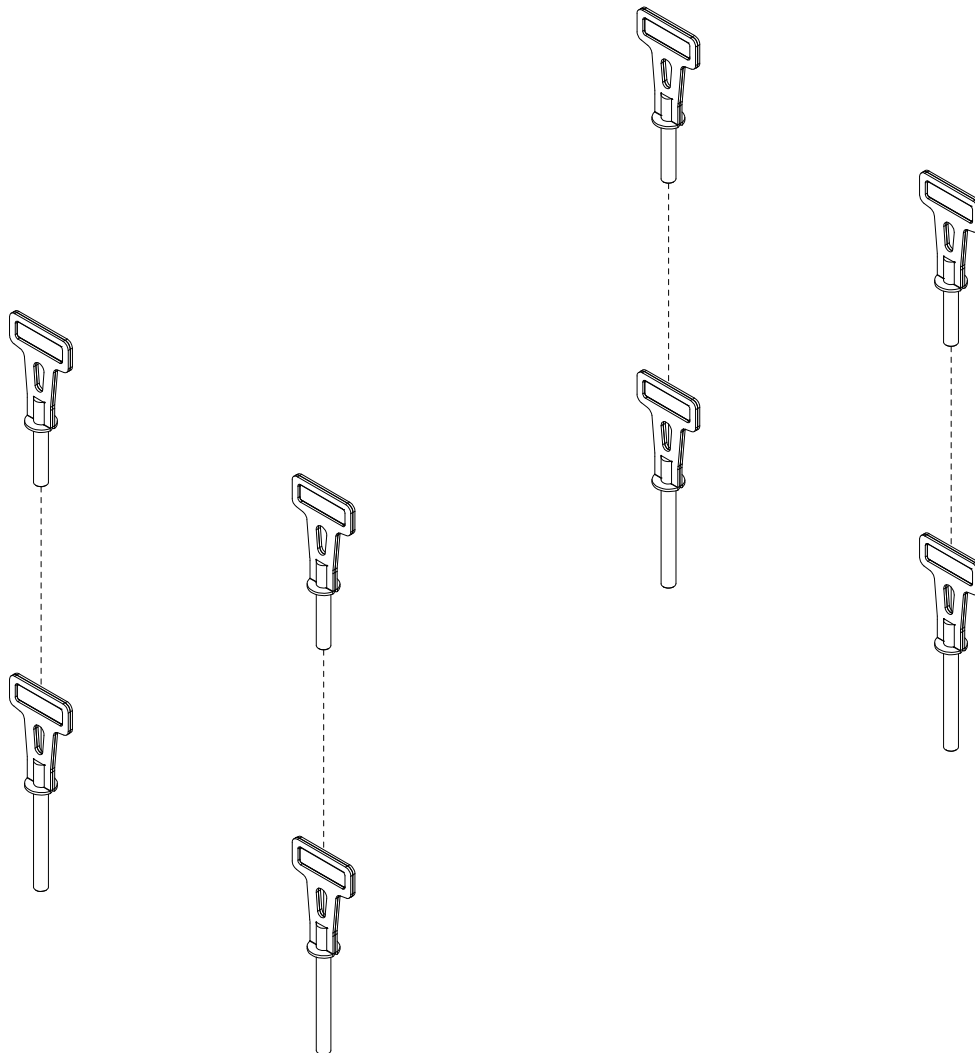


**READ ME !** ⚠

Thank you for purchasing your Recovery Boards Pro Table Pin Set / Top Mount.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

IN THE BOX


1	4 X	Short Mounting Pin
2	4 X	Long Mounting Pin

TOOLS NEEDED




10mm Wrench

FIGURE 1.1

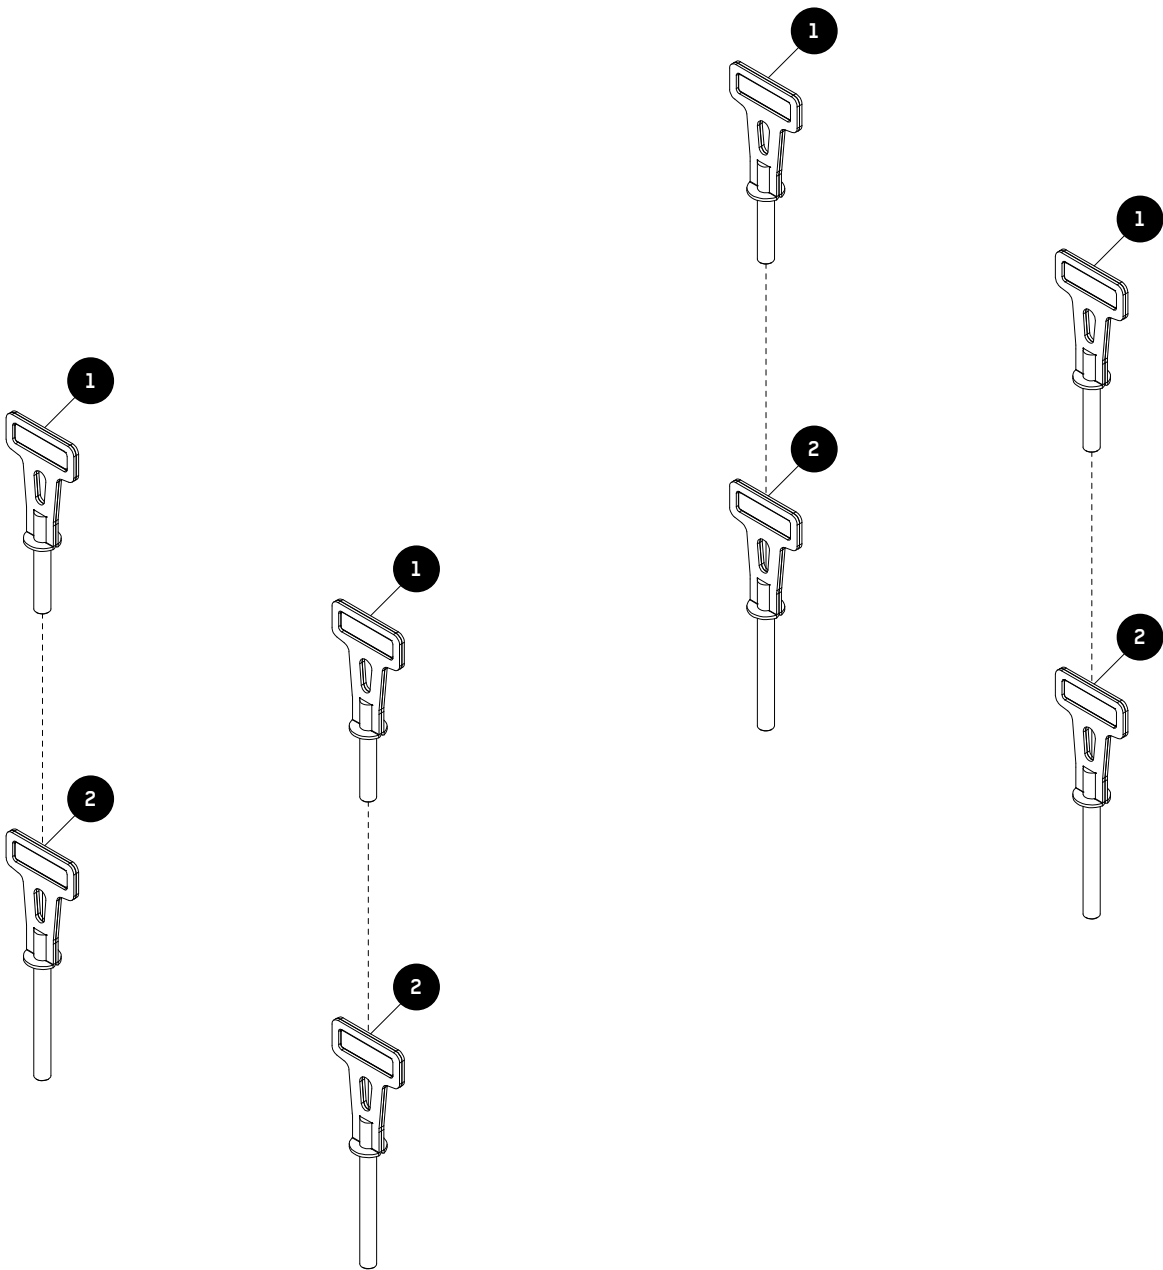


2.1

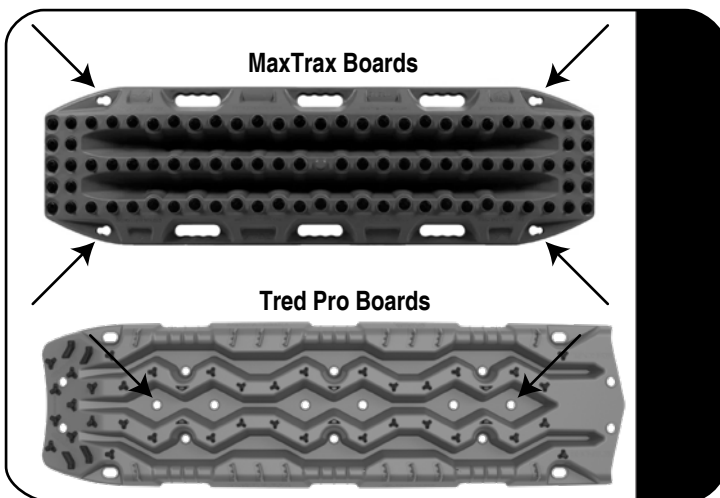

Use the mounting holes as shown for your specific recovery board.

2.2

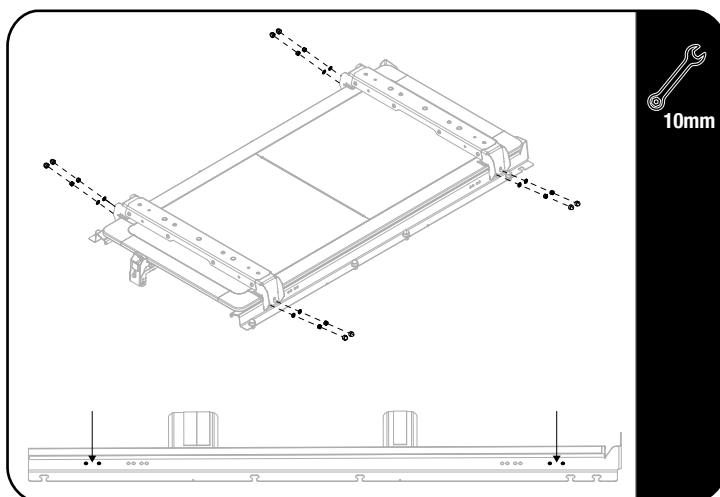


Use this configuration for MaxTrax MKII / Xtreme Recovery Boards.



Ensure the Truss Brackets are assembled as shown, if not they will have to be shifted to the correct position, refer to fitment guide TBRA059 to shift the Truss Brackets.

2.3

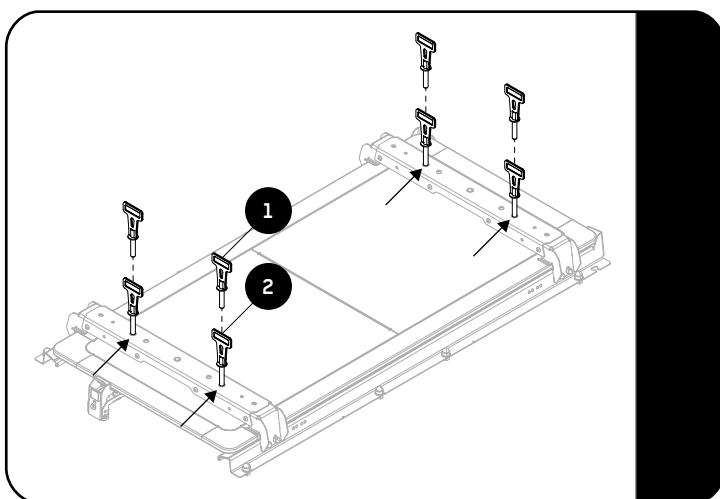

When mounting a pair of MaxTrax MKII / Xtreme boards use the short Mounting Pins (Item 1).


When mounting two pairs use the longer Mounting Pins (Item 2).

Take note of the threaded mounting holes used.

2

FIT AND SECURE

2.4

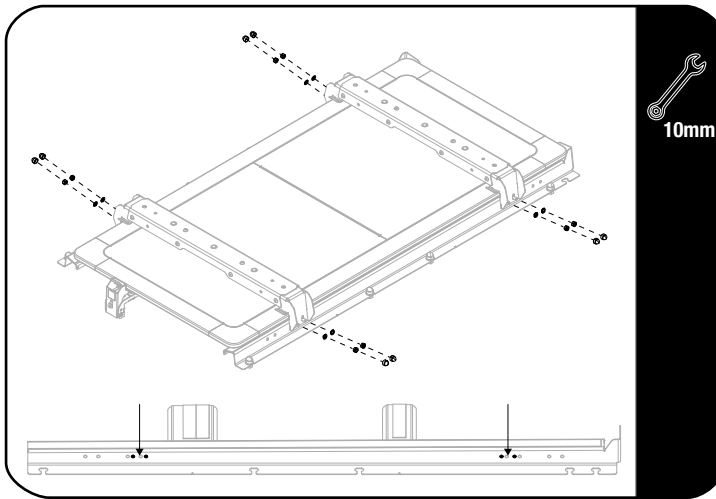


Use this configuration for Tred Pro Recovery Boards.



Ensure the Truss Brackets are assembled as shown, if not they will have to be shifted to the correct position, refer to fitment guide TBRA059 to shift the Truss Brackets.

2.5

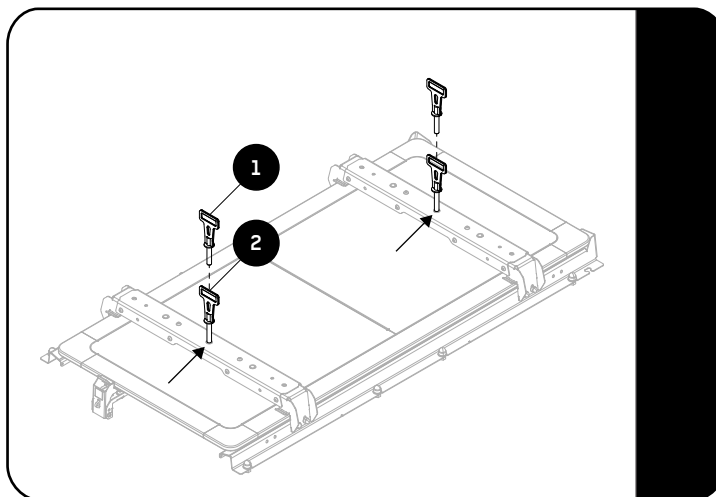

When mounting a pair of Tred Pro boards use the short Mounting Pins (Item 1).

When mounting two pairs use the longer Mounting Pins (Item 2).

Take note of the threaded mounting holes used.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters

Share your adventures on:

