


FRONT RUNNER

**FORD TRANSIT CUSTOM LWB/SWB
(2023 - CURRENT) / VOLKSWAGEN T7
TRANSPORTER/CARAVELLE (2025- CURRENT)
SLIMSPORT RACK 40" LIGHT BAR WIND FAIRING**

ENG

RRAC365

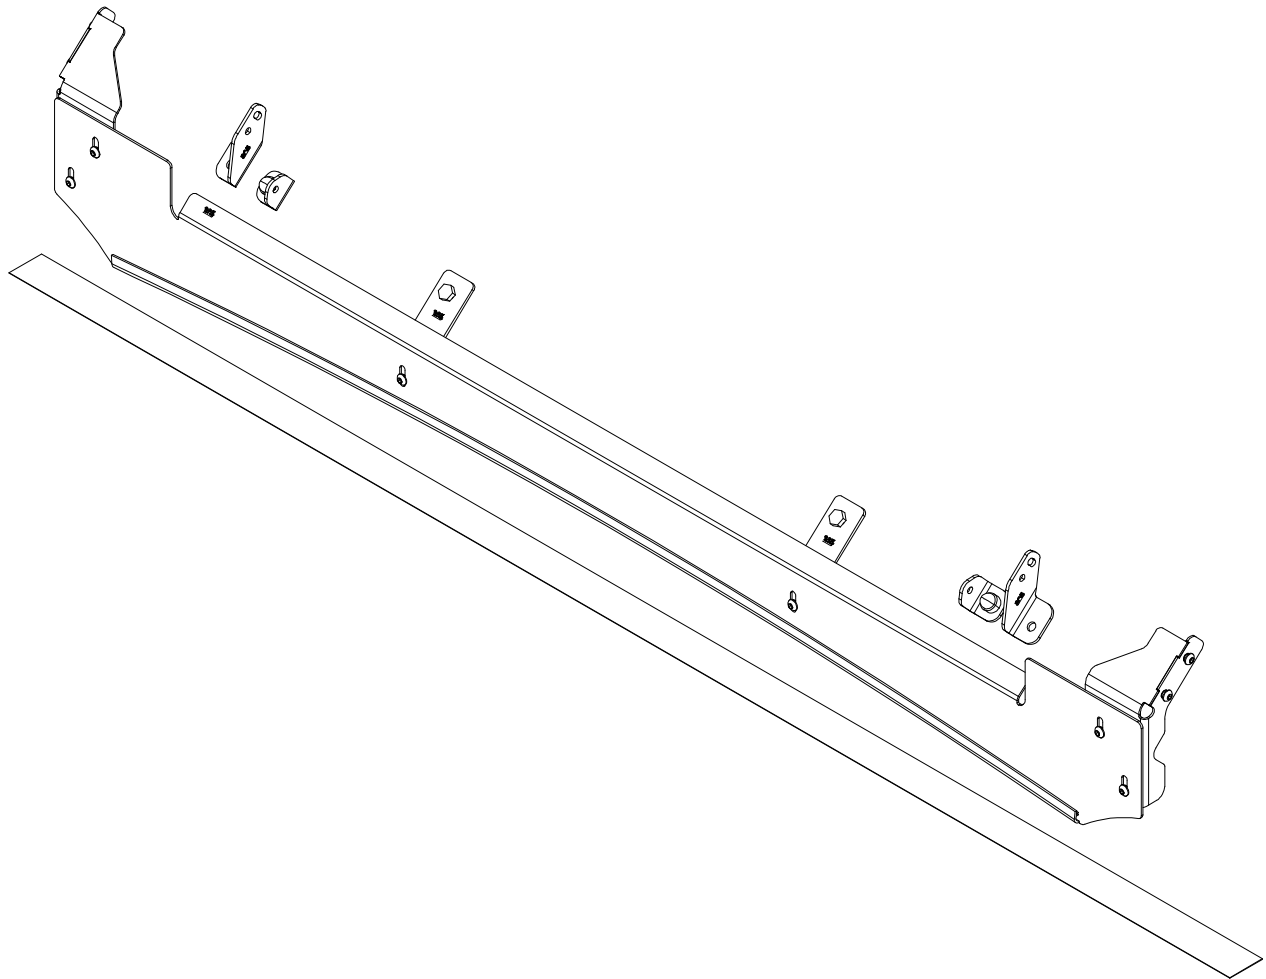

READ ME ! ⚠

Thank you for purchasing a Ford Transit Custom LWB/SWB (2023 - Current) / Volkswagen T7 Transporter/Caravelle (2025- Current) Slimsport Rack 40" Light Bar Wind Fairing.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED


IN THE BOX

1	1 X	Light Bar Wind Fairing
2	2 X	Side Support Bracket - 1 LH & 1 RH
3	2 X	Center Support Bracket
4	1 X	Wind Fairing Rubber - 1185mm
5	10 X	M6 x 16 Button Head Bolt
6	4 X	M6 x 16 Hex Bolt
7	4 X	M8 Nyloc Nut
8	4 X	M8 Nut Cap
9	2 X	High Profile Light Bar Bracket - 1 LH & 1 RH
10	2 X	Low Profile Light Bar Bracket
11	1 X	Clear Vinyl Strip - 1500mm Long


TOOLS NEEDED



FIGURE 1.1

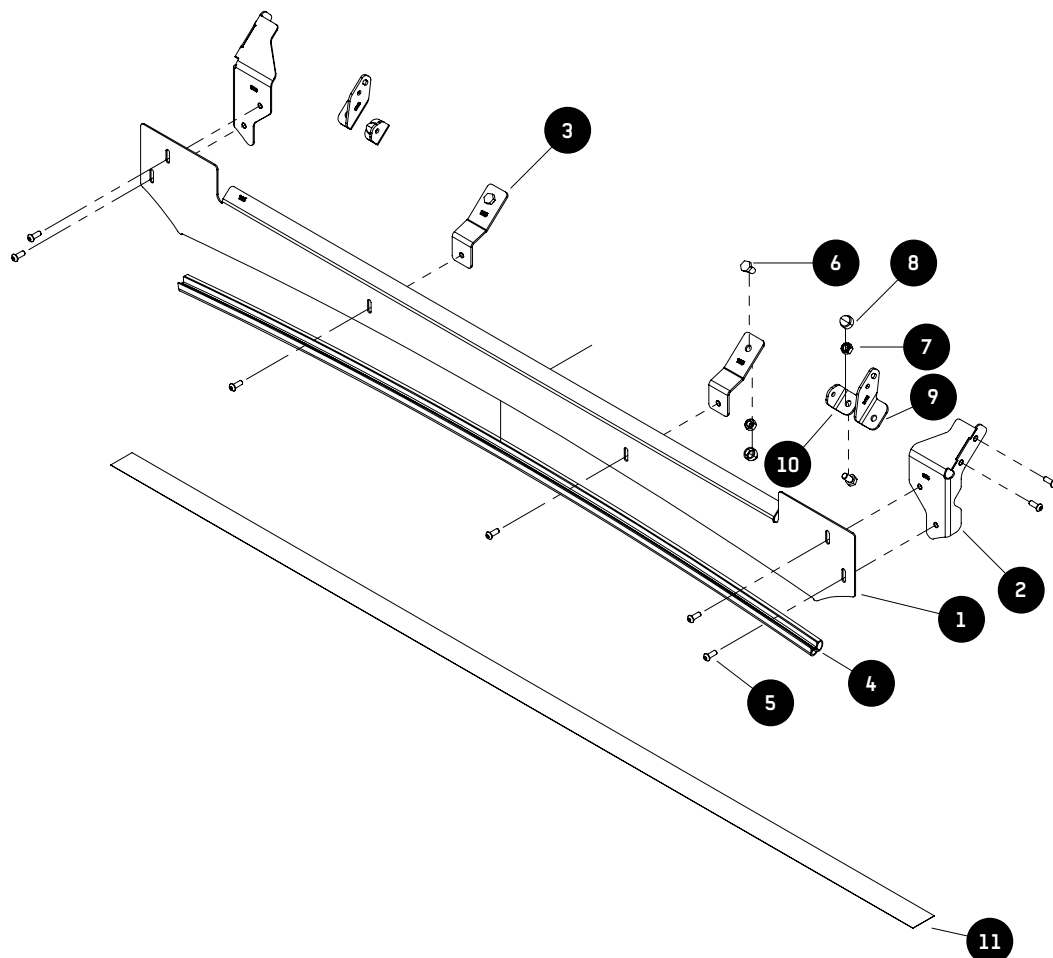


2.1

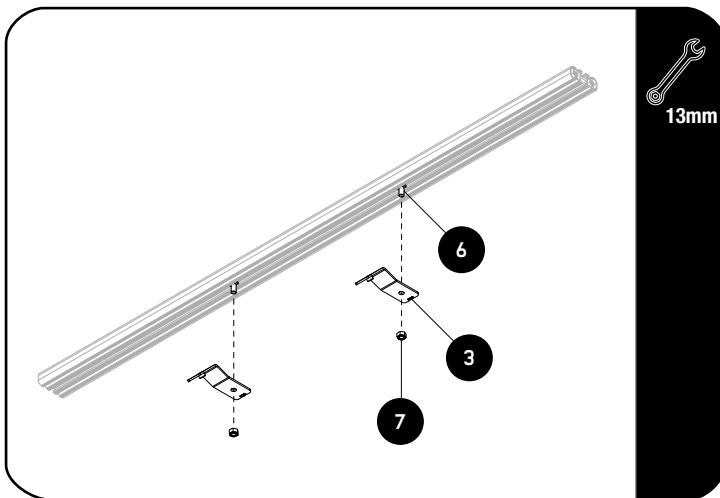

Slide two M8 x 16 Hex Bolts (Item 6) into the bottom T-slot of the front slat as shown.

Loosely assemble the Center Support Brackets (Item 3) with the M8 Nyloc Nuts (Item 7).

2.2

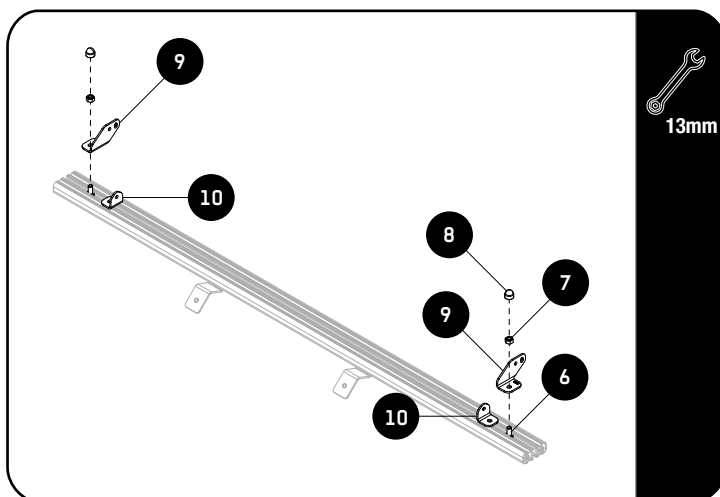

Decide if the Low Profile/High Profile Light Bar Brackets will be used (Item 9 or 10). Slide two M8 x 16 Hex Bolts into the Top T-slot of the front slat as shown.

Fit the 40" Light Bar (LIGH213) to the chosen light bar brackets by using M8 Nyloc Nut (Item 7) and fully tighten the brackets to the front slat once the light bar has been centered on the slat.




Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

Place the M8 Nut Caps (Item 8) over the M8 Nyloc Nuts (Item 7) as shown.

2.3

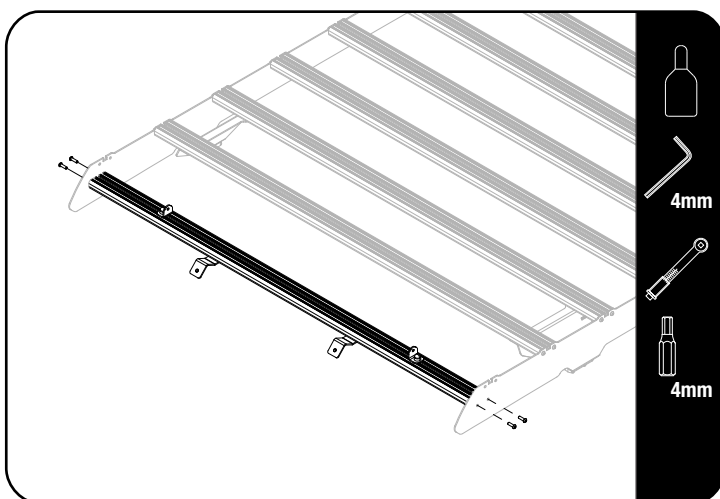

Fit and secure the front slat to the Foot Rails as shown by using the M6 x 20 Button Head Bolts provided with the Slimsport rack.




Apply a drop of Thread Locker on each M6 x 20 Button Head Bolt before securing the slats.



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

2.4

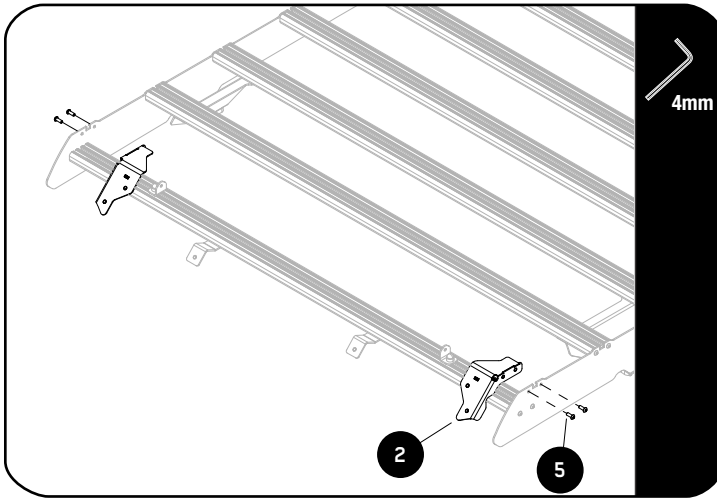


Assemble the Side Support Brackets (Item 2) to the Slimsport rack and secure using the M6 x 16 Button Head Bolts (Item 5).



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

2.5

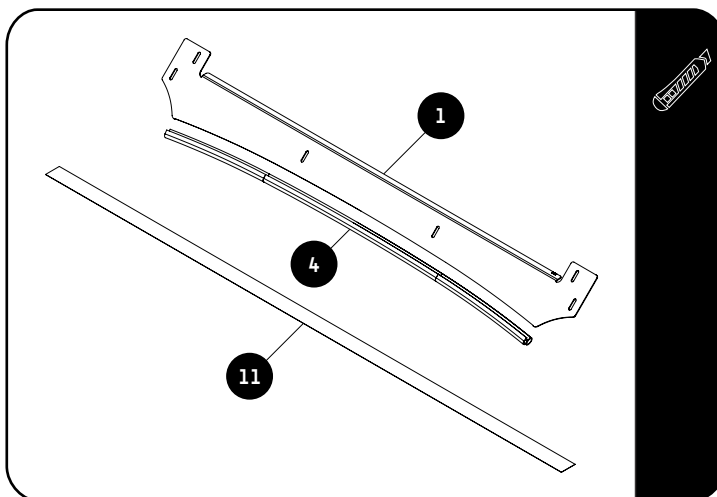


Fit the Light Bar Wind Fairing Rubber (Item 4) to the Light Bar Wind Fairing (Item 1), using the notched section as a guide, trim if needed.

Use the Clear Vinyl Strip (Item 11) included to protect the paint work, where the Rubber Trim will make contact with the roof.

Use denatured alcohol to ensure the roof is clean before applying the Clear Vinyl Strip (Item 11).

Cut the Clear Vinyl Strip (Item 11) to fit the roof of the vehicle.

2.6

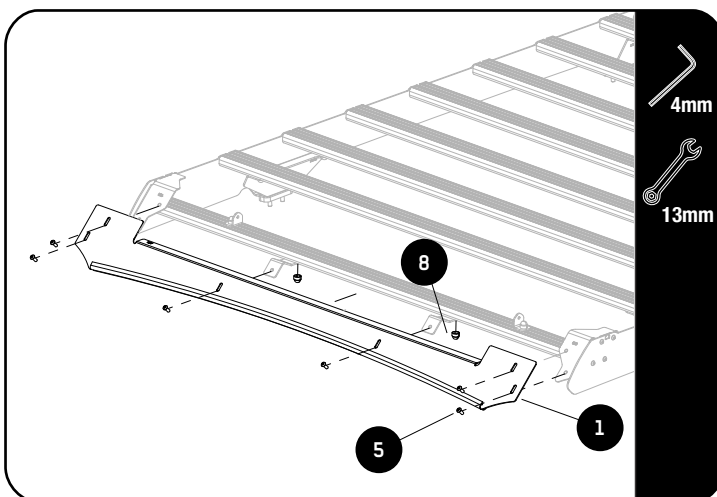

Fit the Light Bar Wind Fairing (Item 1) to the Side Support Brackets (Item 2), using four M6 x 16 Button Head Bolts (Item 5) as shown. Adjust the height and fully tighten the four fasteners

Slide the Center Support Brackets (Item 3) to align with the corresponding slots on the Light Bar Wind Fairing (Item 1) and fully tighten the M8 Nyloc Nuts (Item 7) from Step 2.1, followed by the remaining to M6 x 16 Button Head Bolts (Item 5).



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

Place the M8 Nut Caps (Item 8) over the M8 Nyloc Nuts (Item 7) from Step 2.1.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters

Share your adventures on:

