


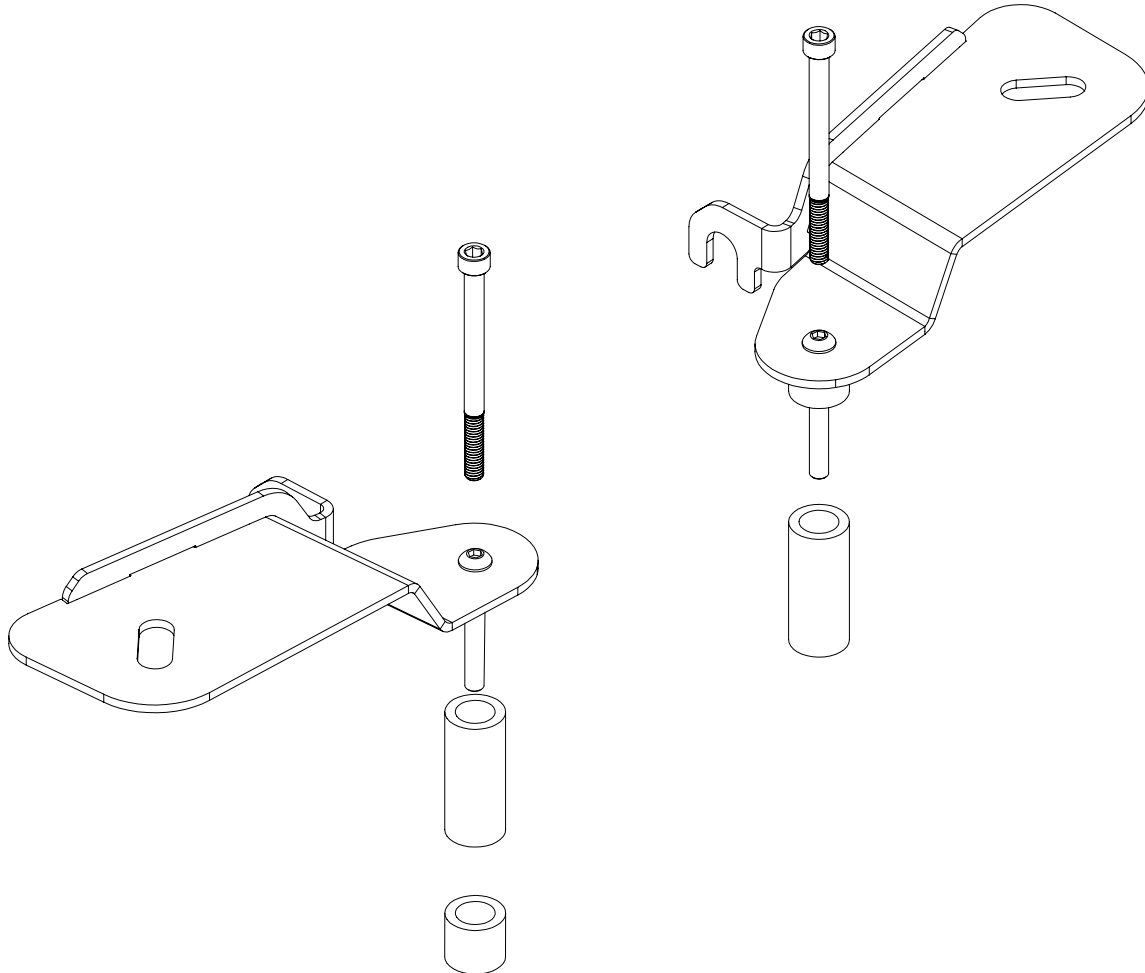

READ ME ! ⚠

Thank you for purchasing Jeep Wrangler JL Ditch Mount A-Pillar Light Brackets.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

IN THE BOX

1	2 X	Mounting Bracket - 1LH & 1RH
2	2 X	M6 x 80 Socket Head Cap Screw
3	2 X	M6 x 50 Button Head Bolt
4	2 X	Spacer OD19 x ID12.58 x 15
5	2 X	Spacer OD19 x ID12.58 x 45

TOOLS NEEDED






FIGURE 1.1

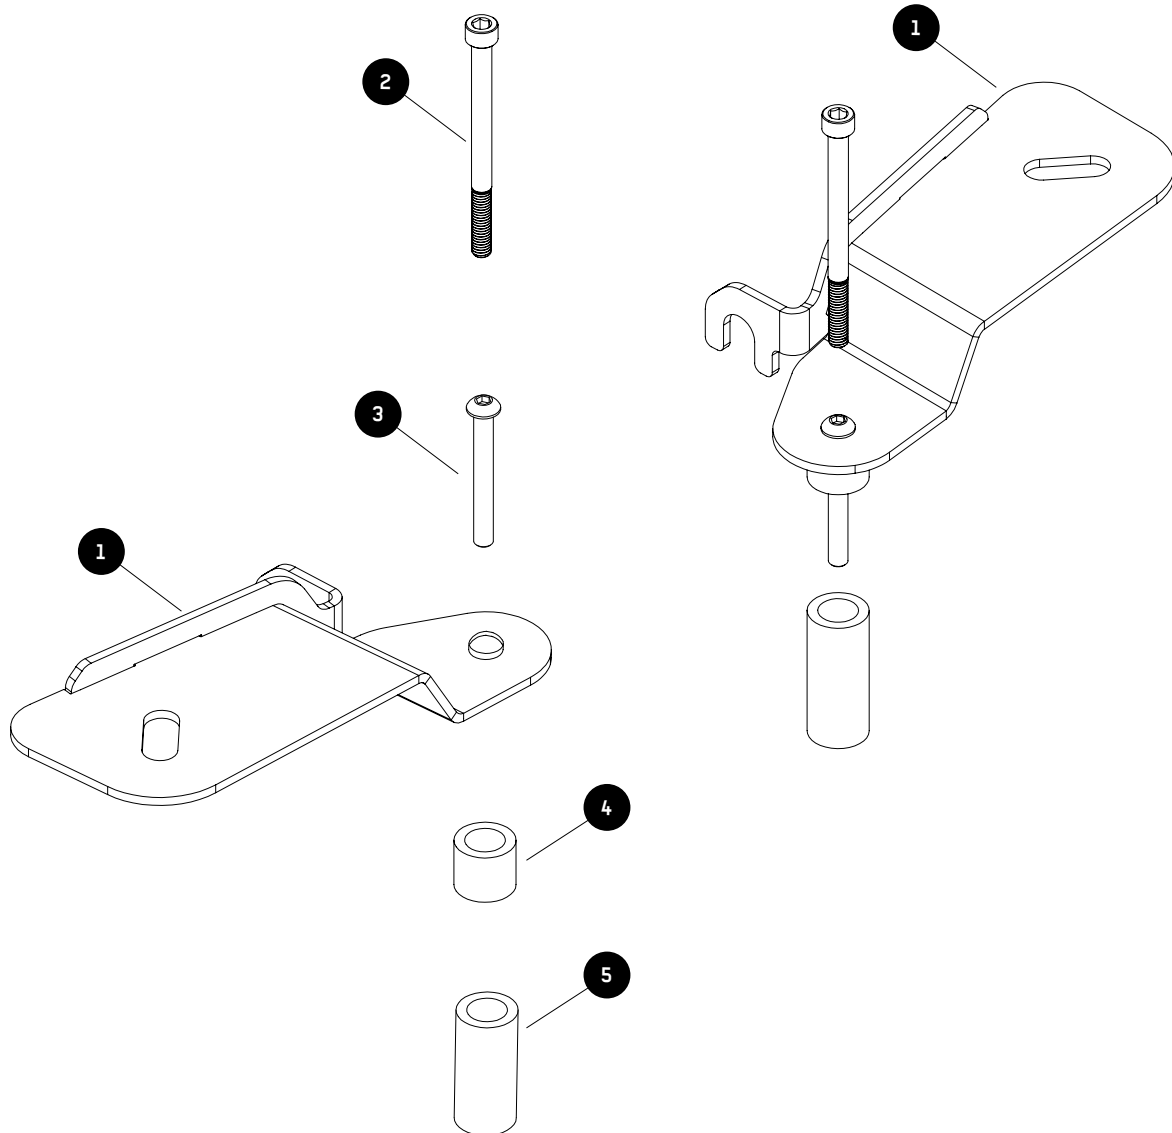

2

FIT AND SECURE

2.1

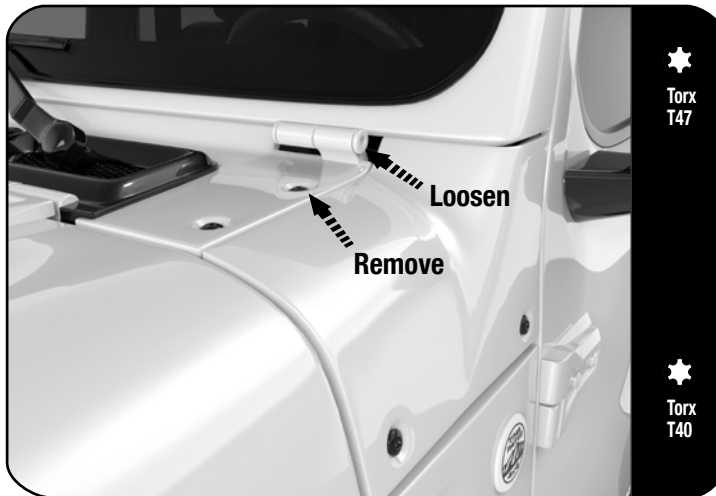


Loosen the hinge nut just enough that the Mounting Bracket can fit between the nut and the hinge. See 2.2

Remove the top rear cowling cover bolt.

Do this on Both sides of the vehicle.

2.2

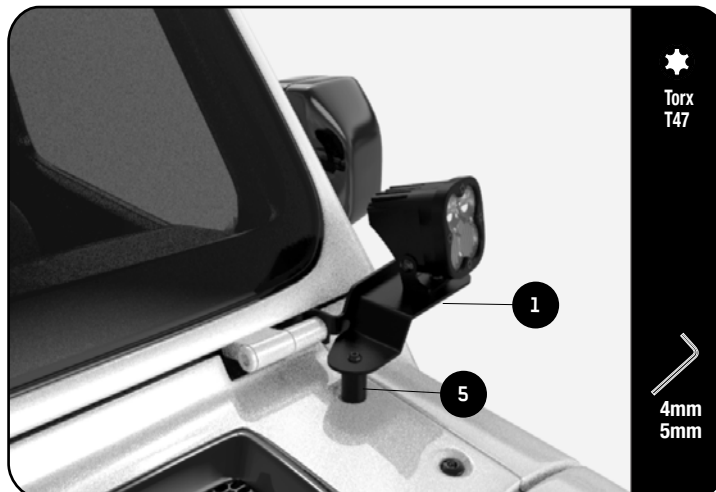

On the V6 Model Jeep, place the 45mm Spacers (Item 5) where the top rear cowling bolt was removed.

Slide the Mounting Bracket (Item 1) between the hinge nut and the hinge before securing.

Use M6 x 80 Socket Head Cap Screws (Item 2) to secure the Bracket to the vehicle.

On the V8 Model Jeep, place the 15mm Spacers (Item 4) where the top rear cowling bolt was removed and secure with M6 x 50 Button Head Bolts (Item 3).



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters

Share your adventures on:

