




READ ME!

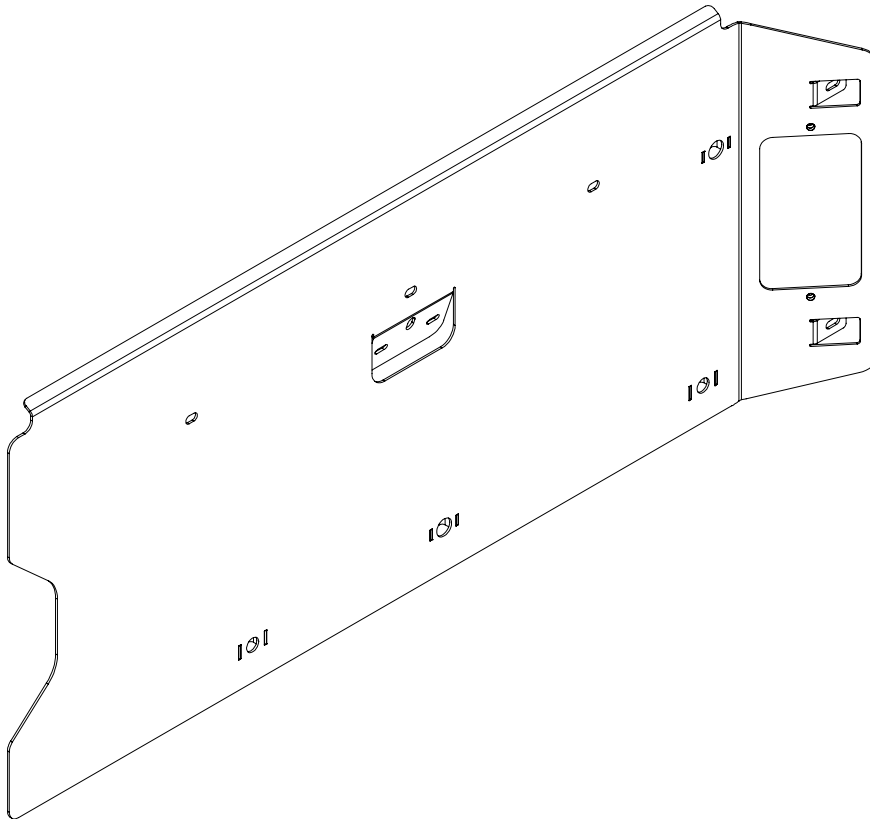

Thank you for purchasing a Front Runner Jeep JL Rear Door Base Plate.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.



1 GET ORGANIZED

IN THE BOX

1	1 X	Rear Door Base Plate
2	1 X	Wire Connector Cover Plate (ALU)
3	2 X	M5 x 10 Button Head Bolt
4	2 X	M5 x 16 Button Head Bolt
5	5 X	M6 x 16 Button Head Bolt
6	2 X	M8 x 16 Button Head Bolt
7	2 X	M5 Cage Nut for 3mm Material
8	2 X	M5 Flat Washer

TOOLS NEEDED





FIGURE 1.1



2.1

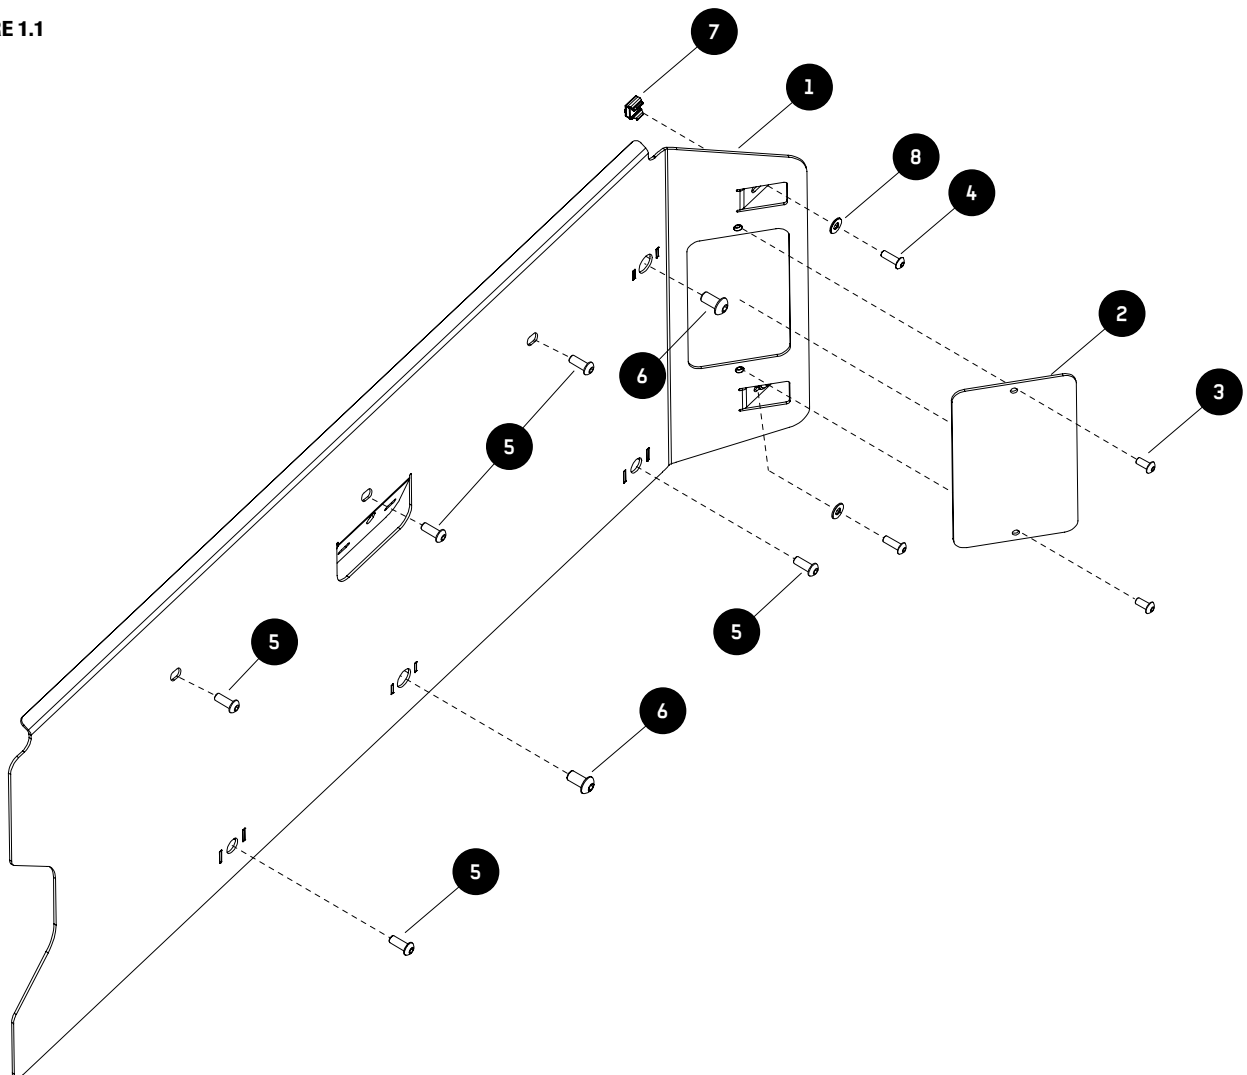

Remove the trim panel from the rear door by carefully unclipping it with a panel tool or other similar tool.




If your vehicle has the cargo Rail fitted, remove it by loosening and removing the three bolts securing the rail to the door.

2.2




Trim panel removed

2.3

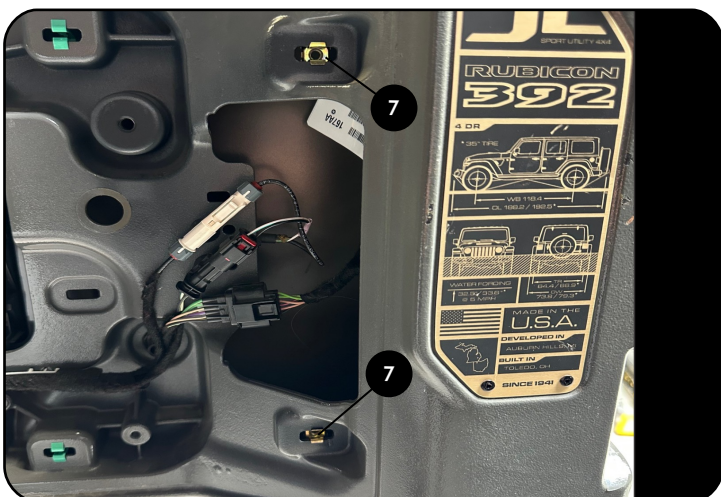

Insert M5 Cage Nuts (Item 7) into the two slots indicated.

2.4

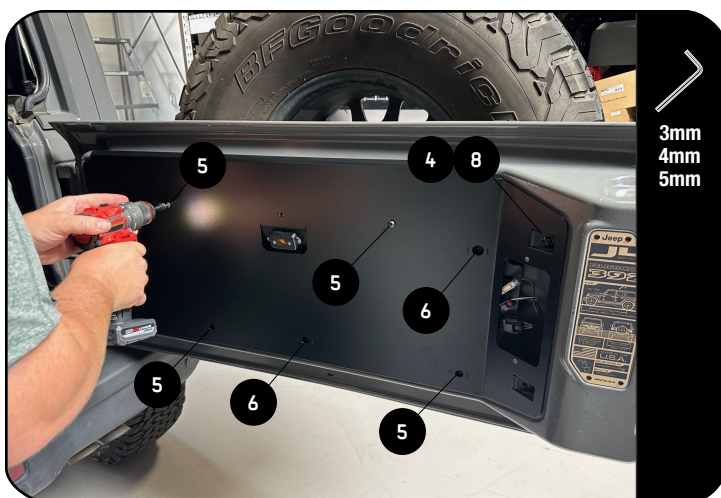

⚠ If you plan to install a Down Light on the Base Plate, do so before securing the plate to the tailgate. (Down Light sold separately).

🔄 Secure the Base Plate (Item 1) to the tailgate using M5 x 16 Button Head Bolts, M5 Flat Washers, M6 x 16 Button Head Bolts, and M8 x 16 Button Head Bolts (Items 4, 5, 6 & 8).

⚠ Refer to Figure 1.1 for the position of the various fasteners.


Tightening Torque:

M5 : 7Nm / 5.9 ft lb - 7.38 ft lb

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

2.5

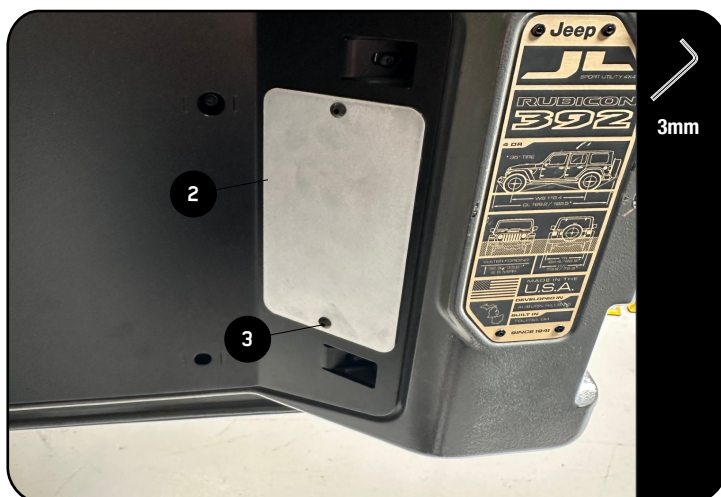

🔄 Secure the Wire Connector Cover Plate (Item 2) using M5 x 10 Button Head Bolts (Item 3) .

2.6



🔄 Secure your Drop Down Table to the Base Plate using the fasteners supplied with the Drop Down Table (Drop Down Table sold separately).

4

CARE

Thoroughly clean the board with mild detergent and warm water. Avoid using harsh chemicals, as these can dry out the bamboo. Apply food grade mineral oil/beeswax to the table surface and edges, at regular intervals to extend the life of your bamboo board.

5

FINISH

Congratulations! You did it. Take a step back and admire your work!

6

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

