**READ ME !** 

Thank you for purchasing a Front Runner Single Jerry Can Holder.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING! 

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED


IN THE BOX

1	1 X	Jerry Can Holder Strap
2	1 X	Jerry Can Holder Tray
3	3 X	M8 x 12 Button Head Bolt
4	3 X	M8 Schnorr Washer
5	3 X	M8 Thin Nut

TOOLS NEEDED




FIGURE 1.1

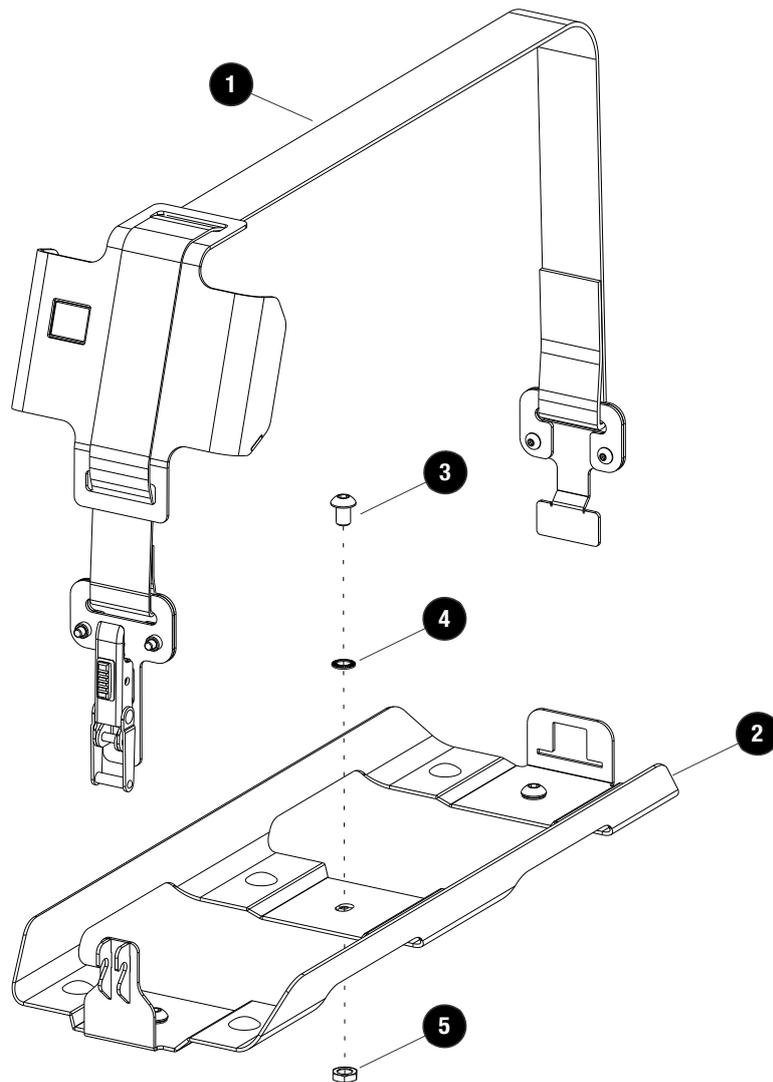

2**FIT AND SECURE**


2.1

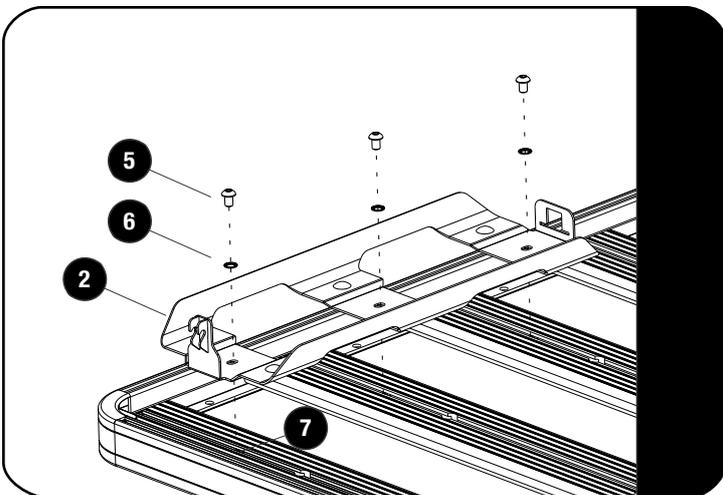

Decide where on your Rack you want to mount the Jerry Can Holder.


Slide three M8 Half Nuts (Item 7) into the machined slots. Secure the Jerry Can Holder Tray (Item 2) to the Rack using M8 x 12 Button Head Bolts and M8 Schnorr Washers (Items 5 & 6) as shown.

2.2

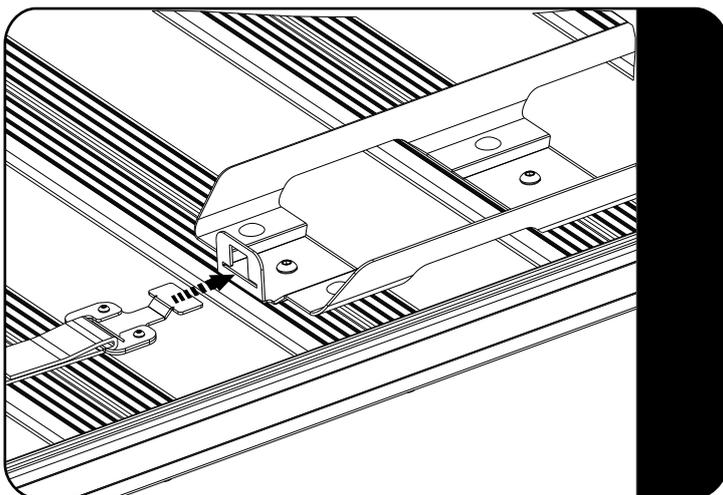

Insert the rear hold plate on the Strap into the slot on the Jerry Can Holder Tray.


2.3

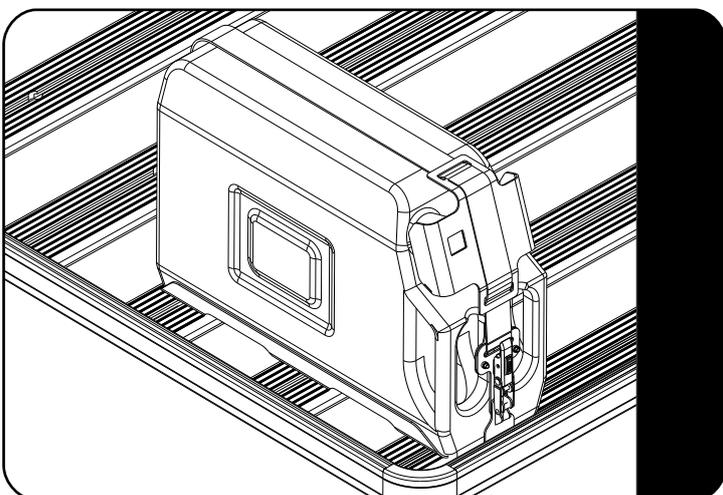

Place your jerry can into the Jerry Can Holder Tray.

Lift the Strap over the the jerry can, ensuring that the bottom lip of the Filler Holding Plate is locating at the bottom of the filler cap.

2.4

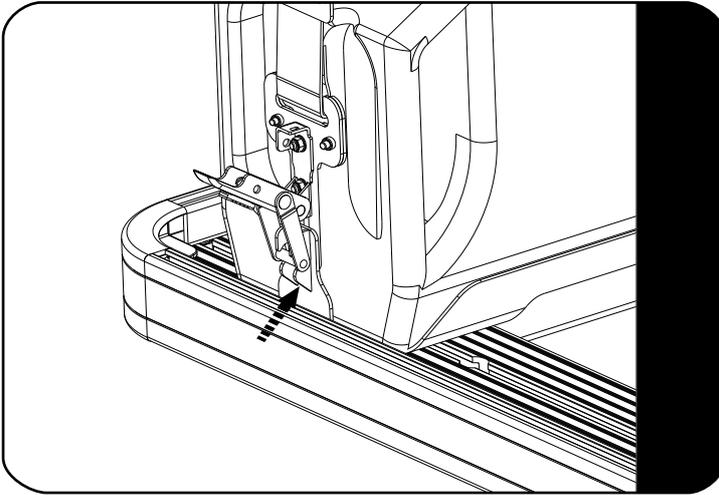


Open the latch and hook it into the catch plate on the Jerry Can Holder Tray.

Engage the latch.

If the Strap is too tight and the latch can not engage or if the jerry can is still loose see 2.5 for instructions to set the latch.


2.5

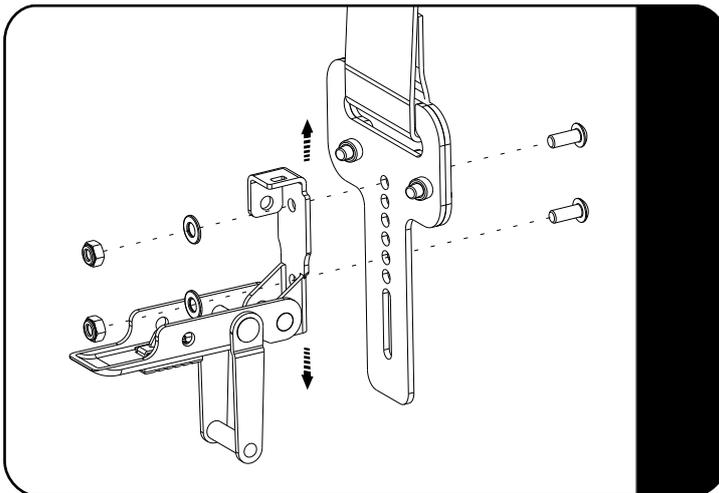

Using a 3mm allen key and a 7mm spanner, loosen the two bolts holding the latch to the latch plate.

Move the latch up or down depending on your findings in 2.4.

2.6

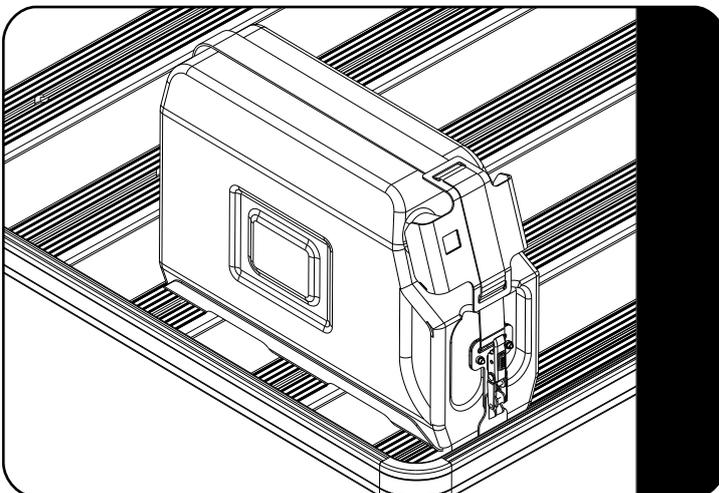

Place your jerry can back into the Jerry Can Holder Tray.

Engage the latch to secure the Jerry can in the tray.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    